

ENCERADORAS

EC180101



CORREA ENCERADOR ELECTROLUX B23 ORIGINAL

EC180102



CORREA ENCERADORA ELECTROLUX MODERNA B95 ORIGINAL

EC180201



BOLSA 3 unidades ESTROPAJO ENCERADORA ELECTROLUX ORIGINAL

EC180202



DISCO LANA ENCERADORA ELECTROLUX ORIGINAL

EC180401



LIQUIDO ABRILLANTADOR SUELO LUX 2 L ORIGINAL (AZUL)

EC180402



LIQUIDO ACRIALADOR SUELO LUX 2 L ORIGINAL (ROSA)

EC180403



BOTE CERA LIQUIDA LUX 2 L. ORIGINAL (BLANCA)

EC180501



BOLSAS 3 MOPAS ENCERADORA ELECTROLUX ORIGINAL

ENCERADORAS

EC180502



MOPA ENCEDORA ELECTROLUX MOD. K-1
ORIGINAL

EC180601



BOLSAS 3 PINZAS MOPA ENCEDORA
ELECTROLUX ORIGINAL
